PMIC-0100 Microphone Quick Guide

Package Content



Microphone



RCA to 3.5 mm Cable



RCA to Naked Wire Cable



Female Power Connector




Male Power Jack to Naked Wire Cable

How to Connect the Microphone?

The manner to connect the microphone to the camera varies depending on the audio input connector of the camera.


For cameras with 3.5 mm audio input jack

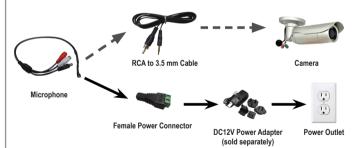

Pin Mapping

Female Power Connector	DC12V Power Adapter
Positive (+)	Cable with WHITE stripe
Negative (-)	Cable without stripe

For cameras without 3.5 mm audio jack

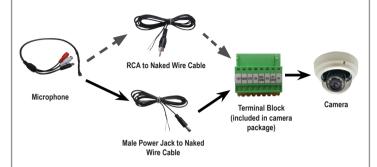

Pin Mapping

Wire Color		Terminal Block
RCA to Naked Wire	White	Al (Audio Input)
4	Black	Al GND (Ground)
Male Power Jack to	White	12V
Naked Wire	Black	GND (Ground)

NOTE:

 The above pictures are for reference only. Terminal blocks and labels vary depending on camera model.